




Yealink T4X series phone local power supply connection

- Plug an ethernet cable from the “Internet” jack on the back of the phone to your data network connection that will connect to the internet.

From an Office location it will be the data jack on the wall.

From a Home location it may be the back of the internet source router. This would be the same ethernet jack you would plug a computer into to get to the internet.

- Then plug the supplied Power supply into the jack labeled “DC5V” and plug the other end into the nearest AC outlet. This will power up the Yealink phone and start the linking process. This can take a few minutes. Once completed your phone will have the normal home screen and is ready to use.

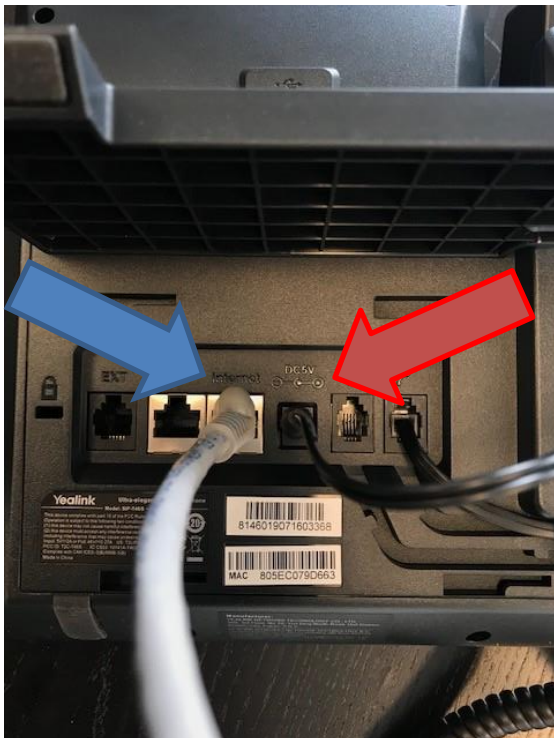

Any questions, please contact us at 802-296-6800 or service@key-comm.com

Thank you